

Test values	mbar	(mm Hg)
Vacuum	70—90	(50—70)


Conventional tools

Vacuum meter, connecting nipple

Checking

- 1 Unscrew vacuum line on governor of injection pump.
- 2 Screw in connecting nipple (2).
- 3 Push adjusting lever on injection pump completely forward to stop and plug on test hose (1).

- 1 Test hose
2 Connecting nipple

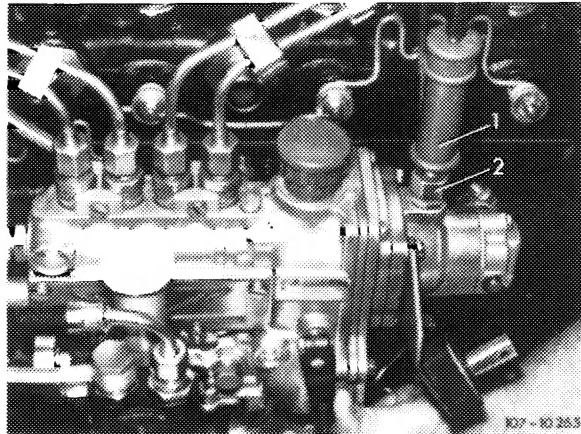

- 4 Release adjusting lever and read test value.
- 5 Watch vacuum meter for constant pressure.
- 6 If pressure drops, the double thread connection for the vacuum line, the O-rings for the tickler shaft, the regulator housing or the regulator diaphragm may be leaking. Remove leaks, if any, or replace diaphragm of injection pump (07.1—215).